

Central Locking Wiring Instruction

Volkswagen Amarok

For central locking wires, tape into the central locking next to the driver's seat as this gives easy access.

The wires here are coming from the back passenger door and running up to the A pillar.

Operating the central locking, a pulse is sent down one wire for lock and down another wire for unlock.


A test lamp will detect the pulse and give a flash.

If you connect the permanent power to the solenoid, this will burn the solenoid out.

Sometimes there is a wire that will pulse both for lock / unlock, avoid this as it will confuse the solenoid.

Connect Green to white (unlock)

Connect Blue to Yellow (lock)

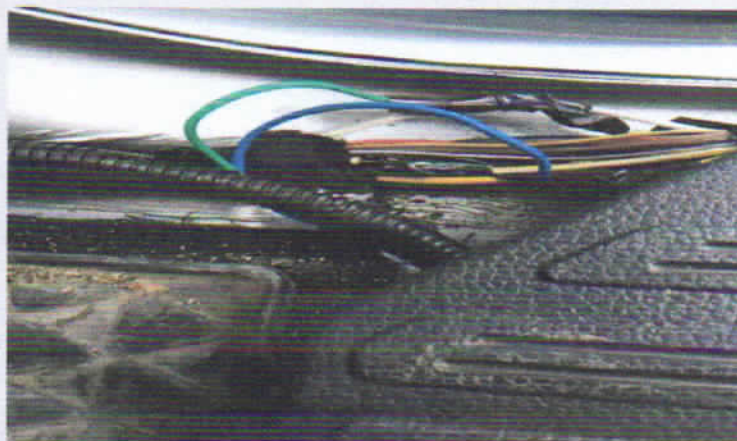

SJS PRO-PRODUCTS CO., LTD.

Latkrabang Estate Export Processing Zone 2

No. 10 Soi Chalong Krung 31, Lamplatiw Sub-district, Latkrabang District, Bangkok 10520 Thailand

Tel : +66 2 399 5400 Fax: +66 2 399 5416 Email: sjs@sjsthailand.com