


Toyota Hilux MK6/7/8 VIGO Central Locking
Vehicle wire colours are listed as a guide.
Please check with a multi-meter before fitting the harness.



2) This will reveal the wiring. Expose the wires as indicated by the arrow above.

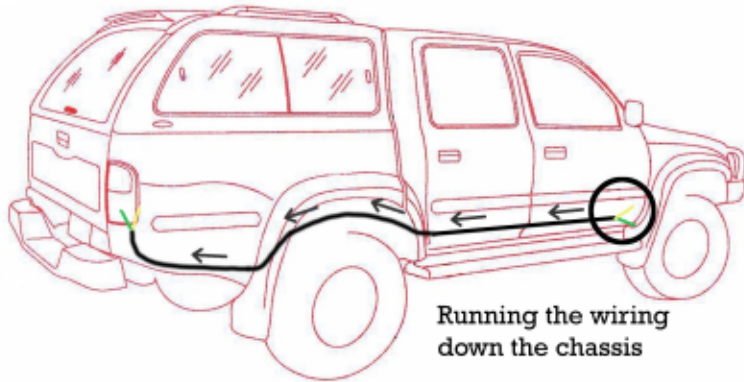

4) Lift the carpet underneath the drivers door. This will reveal a rubber grommet using this grommet, pass the '2-wire' leg through the hole to the underneath of the vehicle and fill with silicon sealant. Attach the wiring loom to the chassis (as shown above) and connect the wires to the canopy.



1) Ensure the ignition is off. Remove door trim from the driver's door.



3) CANOPY VEHICLE
YELLOW CENTRAL LOCKING (LOCK) THIN BLUE
GREEN CENTRAL LOCKING (UNLOCK) BLUE/YELLOW



5) Check that the hardtop locks and unlocks using the vehicle's remote.