

## Fitting Instructions FR8DTHWTC & FR5DTHWTC



Attach the foam to the side arms and to the bulkhead



Remove the rear tie down points and fit the bracket - Align side arm and bolt to bulkhead and rear bracket (allowing for the tailgate to close)

## Fitting Instructions FR8DTHWTC & FR5DTHWTC



Mark and drill the 4 or 6 points for the side arms to be bolted




Insert captive nuts (or nut and bolts)



Set bolts in to bottom holes to stop the bracket from twisting



Fit and attach tri fold tonneau.

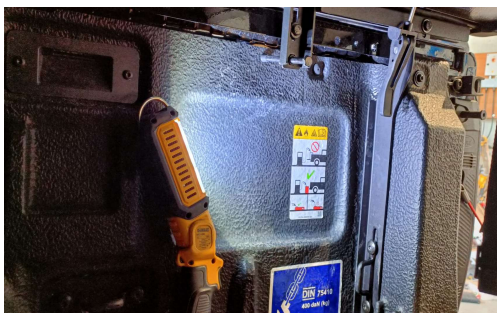

NOTES: