


Fitting Instructions - FR5DYRWTC
To be used in conjunction with the instructions supplied
with the product



Remove plastic side covers. Fix the bulkhead bar using the 2 bolts, fitted into the 2 threaded holes

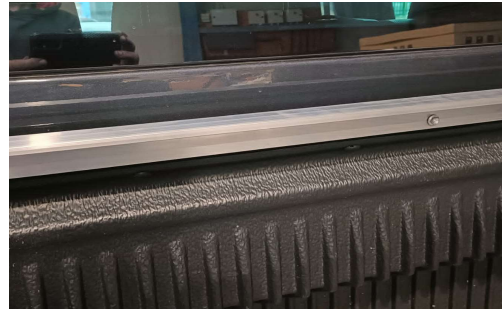

Fit the 2 easydrive bolts



Continue



Remove the rear tie down points, Attach the rear bracket, fit together with the original tie down points. Do not tighten



Bolt the two right angle brackets together



Remove the two bolts from the Wildtrak side arms and re-fit, together with the right angle brackets

Fitting Instructions - FR5DYRWTC



Lift Roller top into place and pull back ensuring clearance with the tailgate.



Line up T-bolts with the side brackets, fit and tighten the M6 nuts. Then tighten all side arm bolts.

NOTES: