


Fitting Instructions - N3DBGB




Nissan Navara NP300 2016-onwards

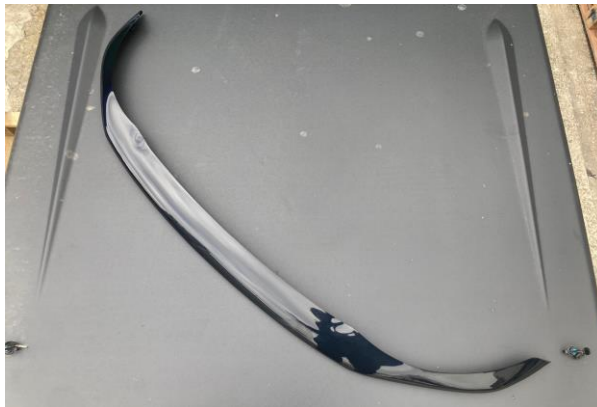

Bonnet guard



Complete fitting kit

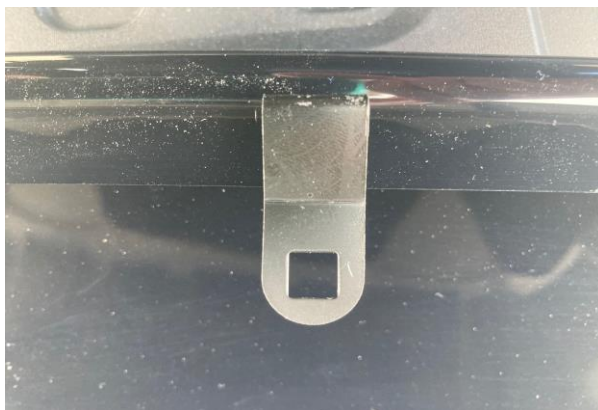

Attach fitting bracket





Align bonnet guard to show the four plastic clips to remove



With bonnet guard aligned, attach self adhesive protection tape



Insert four plastic plugs through the square hole into existing hole in bonnet



Insert and tighten the four screws





Push into place end brackets



Bonnet guard fitting complete

NOTES:-